

Changing the Commander BCM50, BCM 200/400 V4.0 & BCM 450 Time and Date

Log in to the BCM using Element Manager

Select the “Configuration” Tab

Select “System” and the “Date and Time” from the Menu

Select the Drop Down menu from the Date and Time option

You will then be able to set date or time for the BCM

Select OK when complete

The screenshot shows the Commander web interface with the 'Date and Time' configuration page. The 'Task Navigation Panel' on the left shows the 'System' menu expanded to 'Date and Time'. The main content area is titled 'Date and Time' and contains the following sections:

- Date and Time Source:** NTP (selected)
- Network Time Protocol Settings:**
 - NTP server address: 203.191.160.68
 - Synch every (s): 2048
 - NTP security mode: Unsecured
 - Raise alarm if clock differs by at least (s): 10
 - NTP key ID: 0
 - NTP key string: (empty)
- Current Date and Time:**
 - Date and time: 2009-09-02 14:57:10
 - Time zone: September 2009
 - Daylight Savings Time: (calendar view)

The calendar view shows the current date is September 2, 2009. The time is set to 2:57:10 PM. The 'Include ACKed alarms' checkbox is checked at the bottom right.