



## Changing the Commander NT40 Time and Date

To Set the Time and Date:

Programming Overlay:

When you begin programming, a group of keys on the key station become the keys for moving through programming headings and settings. The programming overlay is a paper cutout that shows what the four keys do during programming.

Placing the programming overlay:

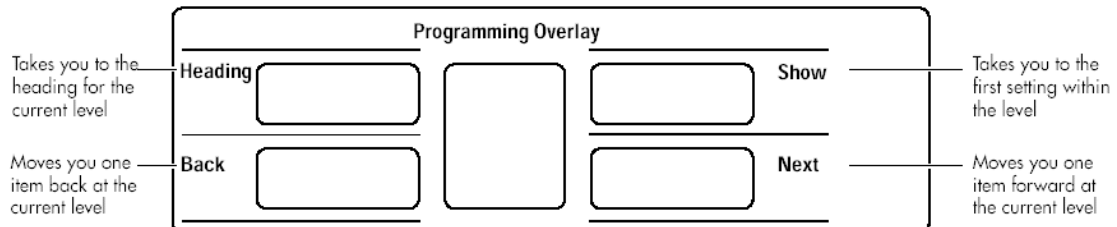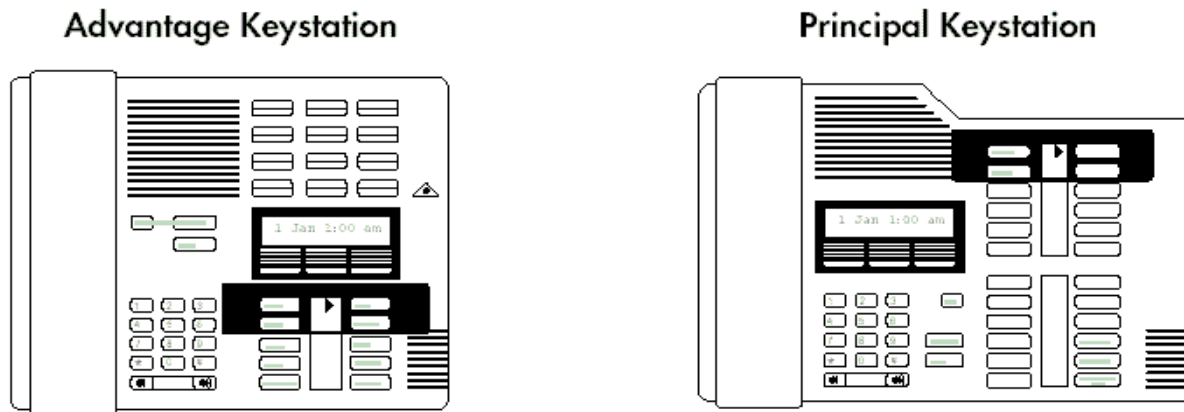

Begin the programming session:

1. Press
2. Press
3. Press
4. Press  five times
4. Press
5. Press dial key pad to enter the hour
6. This will display if you have enter number less than 12
7. Press NEXT
8. Press CHANGE
9. Press dial keys to enter minutes
10. Press NEXT
11. Press CHANGE
12. Press dial keys to enter year
13. Press NEXT
14. Press CHANGE
15. Press Dial keys to enter month

**Display will show**

Feature:

Password:

Time&Date

Hour:01  
NEXT CHANGE

Hour:\_\_\_  
CANCL

AM  
OK CHANGE

Hour:13  
NEXT CHANGE

Minutes: 00  
NEXT CHANGE

Minutes: \_\_\_  
CANCL

Minutes: 30  
NEXT CHANGE

YEAR: 99  
NEXT CHANGE

YEAR: \_\_\_  
CANCL

Months: 01  
NEXT CHANGE

Months: \_\_\_  
CANCEL

Months: \_\_\_  
CANCEL

16. Press NEXT

Day:01  
NEXT CHANGE

17. Press CHANGE

Day: \_\_  
CANCEL

18. Press Dial keys to enter day

Day:15  
NEXT CHANGE

19. Press  to end your session

End of session